

BRISBANE (Head Office) 2/44 Musgrave Rd COOPERS PLAINS QLD 4108 Ph: (07) 3277 3197

E: service@assuredequipment.com.au

SYDNEY 3 Metters Place WETHERILL PARK NSW 2164 Ph: (02) 8103 5017

E: service@assuredequipment.com.au

MELBOURNE 72 North View Drive SUNSHINE WEST VIC 3020 Ph: (03) 9081 0172 E: service@assuredequipment.com.au

# Important: towing of Trailer Mounted Decontamination Units (DCU's)

The below instructions must be followed for transporting a DCU on both public or private roads.

#### **TOWING:**

- Raise jockey wheel and release park brake on the draw bar of DCU
  - Do not leave jockey wheel lowered it must be raised for towing
  - Do not leave park brake engaged it must be released for towing
- Ensure stabiliser legs are raised using the winding tool or drop down handle provided
  - Do not try to move or tow the DCU whilst legs are lowered, it will result in damage
- Ensure steps are raised and secured with chain links (if available)
- Ensure tow hitch is secure and fastened prior to towing
- Ensure safety chains are crossed and secured to tow vehicle using appropriate shackles
- Ensure red "breakaway" emergency brake cord (if installed on that hire model) is connected to the tow vehicle
- Do not tow the DCU if yellow nut indicators are not in place

#### LIGHTS:

- Ensure light harness is connected to tow vehicle. Test brake light, tail light and indicator function prior to moving
  - Do not tow the DCU if brake lights, tail lights and blinkers are not functioning correctly

#### **DOORS, WATER TANK & MISCELLANEOUS ITEMS:**

- Ensure ALL doors, hatches and openings are shut and secured using keys or codes provided
- Ensure ALL items that are not a part of the DCU are removed prior to towing (for example other equipment, vacuums, bulk PPE & consumables), as the DCU is not designed to carry excess weight.
- Empty all water from holding tank to remove excess weight
  - o Do not move or transport the DCU whilst water is in the holding tank, it will result in damage

## **GENERATOR & GAS BOTTLE:**

- Remove Gas Bottle whilst towing
  - o Do not transport the DCU with gas bottle in place it must be removed
- Ensure Generator drawer is securely fastened and hatch closed

Should any of the above requirements not be achievable, please contact your closest Assured Equipment Services branch immediately.

### **DRIVER OF TOW VEHICLE:**

The driver of the towing vehicle must hold a valid driver's licence, and must not be under 23 years of age or those with less than 2 years practical Australian driving experience (within the last 5 years) for this class of vehicle (which does not include any time during which a learner's permit has been held).

<u>ACKNOWLEDGEMENT</u>	<u>.</u>	
I have read and accept the	ne above instructions	
I hold a valid driver's lice	nce and am not under 23 years of	f age
I hold more than 2 years	practical Australian driving experi	ence in line with above requirements
NAME:	SIGNATURE:	 Date: